

CorroWatch™ Instructions

Visual Air Contamination Control Card for Data Centers

Contents: sampler, instructions post paid return mailer for returning sampler for laboratory processing.

Simply stick to a wall or rack. As long as there is no discoloration of the 2 sampler coupons, air meets ASHRAE TC 9.2 requirements for mission critical facilities, technology spaces, and electronic Equipment.

In case of any coupon discoloration of the sampler coupons we recommend that you send the sampler for laboratory processing using the enclosed return mailer. When we receive the sampler we will send you a quote.


For more information please visit www.corrowatch.com or contact us.

Use of this product subject to TERMS at www.corrowatch.com
© Technology Care LLC - All rights reserved - Made in Switzerland
Intl. Patents Pending Swiss Patent Nr. 144605


Test Start

1

Write the "Start Date" on the sampler.

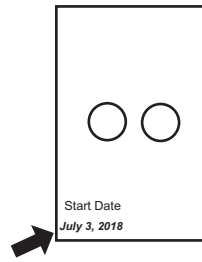

2

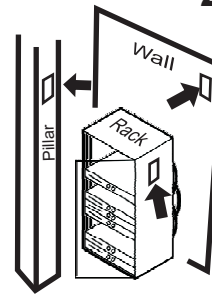


Stick the sampler to a vertical surface where it will not be disturbed or touched such as a wall, pillar or rack. Can also be mounted inside racks, cabinets and air ducts.

Test End


3

Slowly rotate sampler to remove. Do not pull since this could damage painted surfaces. Rub to remove remaining adhesive.

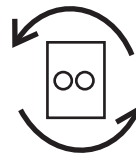

4

Write the "End Date" on the sampler and fill in the information on the back of the return mailer

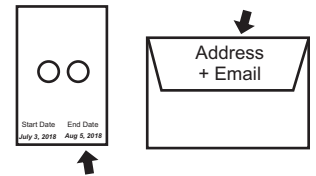

5

Seal sampler in sampler bag and send to our laboratory with the postage-paid mailer. The laboratory report will be sent by email.