

AirGerm™ Instructions


Air Hygiene Test

Use of this product subject to TERMS at www.technologycare.com
© Technology Care LLC - All rights reserved - Intl. Patents Pending

This form can be downloaded at www.airgerm.com AirGerm™ is a comprehensive air hygiene test for indoor air. Return AirGerm™ for a comprehensive air contamination report. When your sampler arrives at our laboratory we will send you a quote. After receiving payment, we will analyze the sampler and email the lab report within two working days.


Designed for short term air hygiene testing and long term monitoring.
Recommended test period: 7 - 365 days.

Designed to test indoor air hygiene anywhere including in offices, workplace, hospitals, health care, manufacturing, public buildings, data centers, residential and more.

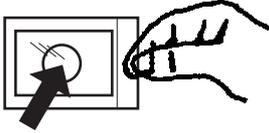

Before removing the sampler, open the bag so that the sticky collector surface is separated from the inside of the bag.


Installation

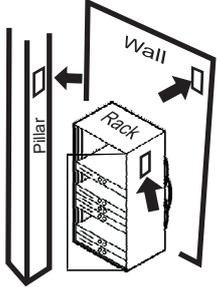

Stick the sampler to a vertical surface where it will not be disturbed or touched such as a wall, pillar or rack.

Note the Start Date on the sampler information.

Sending for lab report

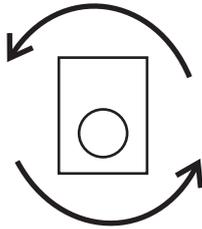

Slowly rotate sampler to remove. Do not pull since this could damage painted surfaces. Rub to remove remaining adhesive.

Note the End Date and other information on the Sampler information.

Seal the sampler in the sampler bag mail using the return label.

Please cut out the return shipping label below and affix to an envelope using clear plastic tape over the entire label.

Customs Declaration:

**Harmless material
sample with no
commercial value.**

Technology Care GmbH
Birmensdorferstrasse 467
8055 Zurich
SWITZERLAND

Please cut out the order form below and insert in an envelope together with the sampler. A photo of the sampler and order form will appear in your lab report.

When your sampler arrives at our laboratory we will send you a quote based on the tests you select. After receiving payment, we will analyze the sampler and email the lab report within two working days.

Laboratory Test Order Form

Sampler ID:

Test Position:

Test Start Date:

Test End Date:

Please select one or more of the following tests*:

- Particle Concentration Price: US\$65.00
- Bioaerosols US\$65.00
- Particle Metrics US\$65.00

* For more information see airgerm.com "Laboratory Reports".

Email (report will be sent here):

Your Name & Address: