

ContamAlert™ Instructions


Air Contamination Indicator

Use of this product subject to TERMS at www.technologycare.com
© Technology Care LLC - All rights reserved - Intl. Patents Pending

This form can be downloaded at www.contamalert.com ContamAlert™ is designed for long term monitoring of air contamination events in data centers and technical rooms for at least 5 years. The indicator has a high contrast electrostatic air filter that makes it easy to see if an air contamination event has occurred.


Recommended test period: 30 days to 5 years.

Each sampler can monitor an area of about 100 m² (about 1000 ft²).

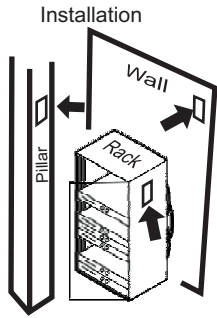

Stick the sampler to a vertical surface such as a wall, pillar or rack.

Sending for lab report

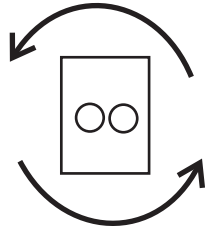

Slowly rotate sampler to remove. Do not pull since this could damage painted surfaces. Rub to remove remaining adhesive.

Fill in information on the "sampler information" form.

Seal the sampler in the sampler bag and mail to the laboratory along with "sampler information". If the sampler bag is not available a ziploc bag may be used.

IMPORTANT: When your sampler arrives at our laboratory we will send you a confirmation email with instructions how to order lab tests.

Cut out the return shipping label below and affix to an envelope using clear plastic tape over the entire label.

Please Cut Out

Customs Declaration:

**Harmless material
sample with no
commercial value.**

Technology Care GmbH
Birmensdorferstrasse 467
8055 Zurich
SWITZERLAND

When returning the sampler please include the sampler information below:

Please Cut Out

Sampler Information

Sampler ID:

Test Position:

Your Email:

Your Name & Address: